



6. Adjustment

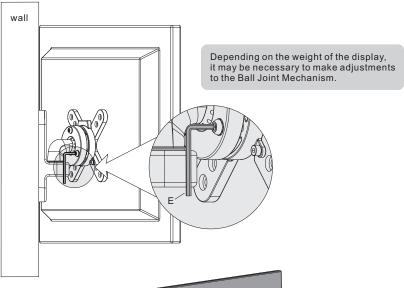

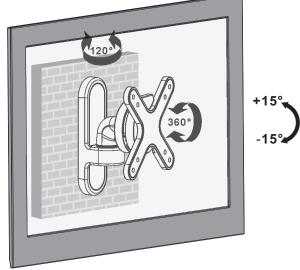


Adjust to the desired position or tilt.

Maintenance

- · Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.



INSTALLATION MANUAL

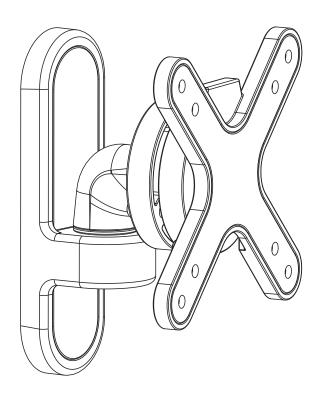

TV Wall Mount



CAUTION: DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

PM-STYLE-23A








ISSUED: SEPT. 2013

⚠ WARNING


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist


IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

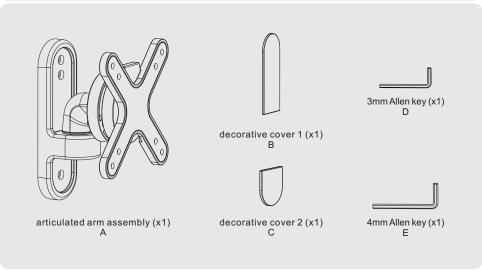

Package M

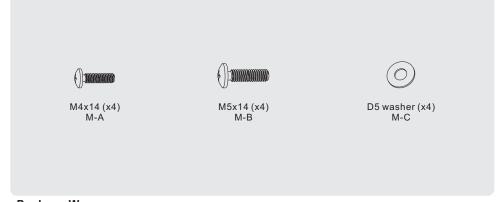


Package W

 



1++++


1. Separating the VESA Plate from the Wall Mount

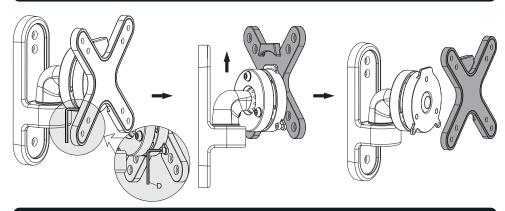


2a. For Wood Stud Wall Mounting

 

 

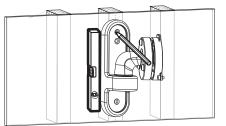

 

Find and mark the exact location of mounting holes

Drill pilot holes



 


 
Screw the wall mount onto the wall


WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

2b. For Solid Brick and Concrete Mounting





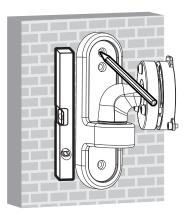




Mark the exact location of mounting holes



Drill pilot holes





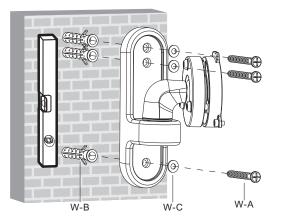




Screw the wall mount onto the wall

∕!\ WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3 €€€ **₩** 4


3. Installing the Decorative Covers

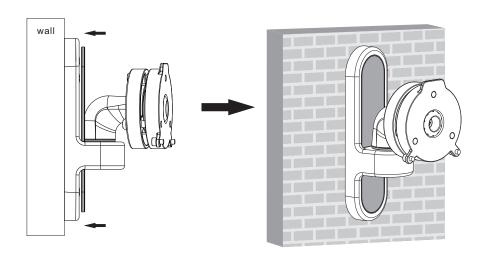

Install the decorative covers along the wall plate rail until they fit snuggly onto the wall plate.

4. Installing the VESA Plate

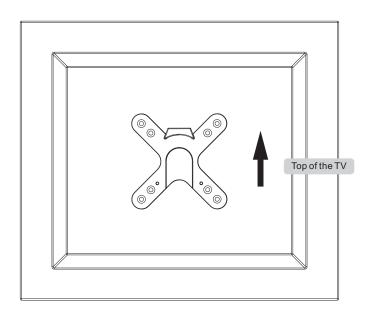


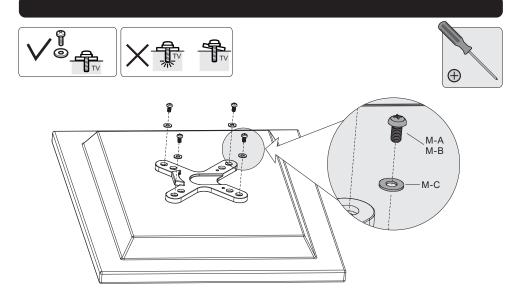

Screw the VESA plate onto the TV.

Tighten all screws but do not over tighten.

5. Hooking the TV onto the Wall Mount

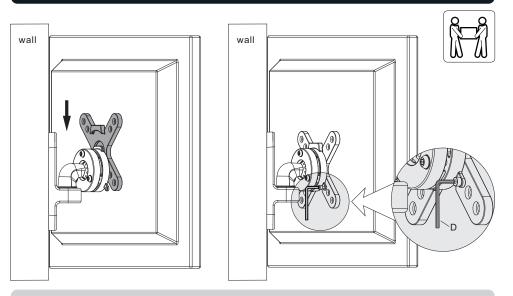

 $Carefully \ lift your \ TV \ and \ hook \ VESA \ plate \ onto \ the \ mounted \ head. Tighten \ screws (that is \ previously \ removed) to secure.$

5₩ ₩ 6