 



PUREMounts®

INSTALLATION MANUAL



TV Wall Mount

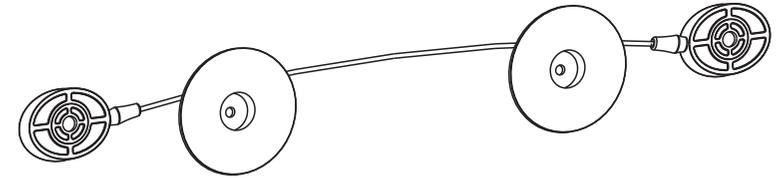

CAUTION: DO NOT EXCEED
RATED LISTED WEIGHT. SERIOUS
INJURY OR PROPERTY DAMAGE
MAY OCCUR!

PM-WIRE-37	 200x200	 42" MAX	 50kg (110lbs) RATED
PM-WIRE-52	 200x200/300x300 400x200/400x400	 55" MAX	

ISSUED: SEPT. 2013

NOTE: Read the entire instruction manual before you start installation and assembly.

WARNING

- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.



wall plate (x2)
A



adapter bracket (x1)
B



supporting spacer (x1)
C

 


supporting spacer (x1)
D

Package M



M5x14 (x4)
M-A



M6x14 (x4)
M-B



M8x20 (x4)
M-C



M6x30 (x4)
M-D



M8x30 (x4)
M-E



D5 washer(x4)
M-F



D8 washer(x4)
M-G

 


small spacer (x8)
M-H



big spacer (x4)
M-I

Package W



ST5.5x50 (x2)
W-A


 


concrete anchor (x2)
W-B




D6 washer (x2)
W-C


1. For Solid Brick and Concrete Mounting

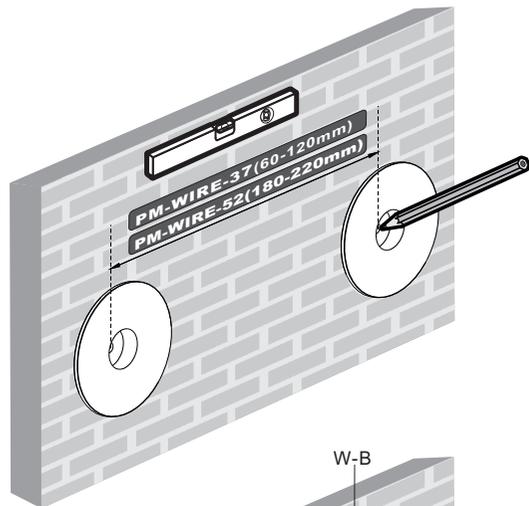

 Mark the exact location of mounting holes




Drill pilot holes

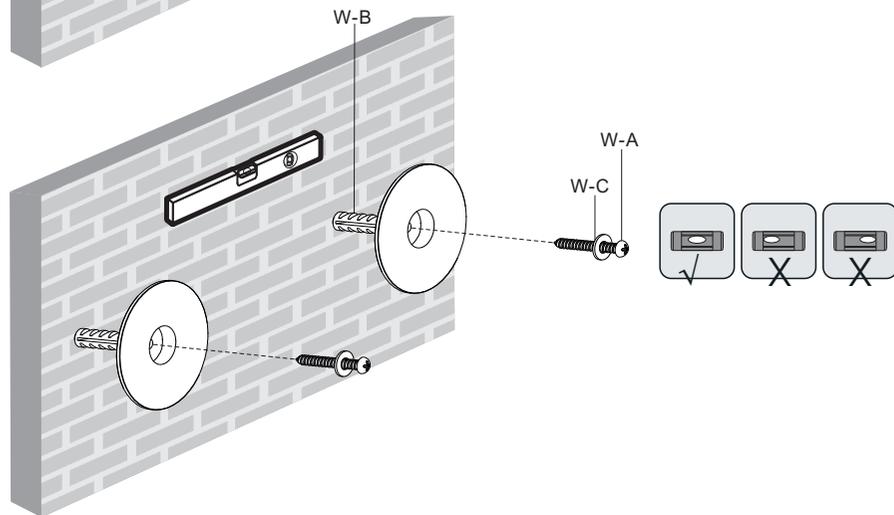



WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.



2. Installing the Adapter Brackets

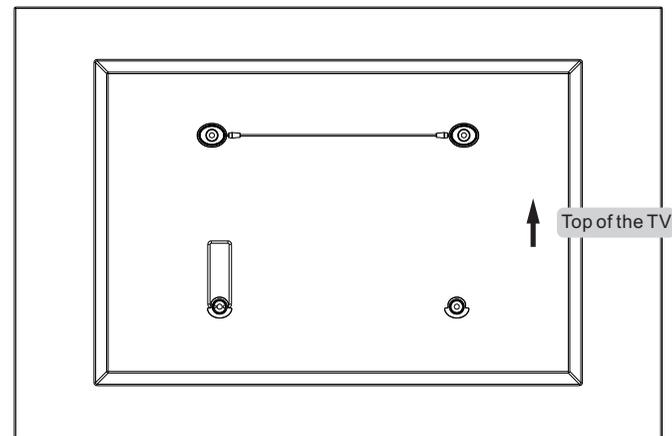

2-1 For Flat Back Screens

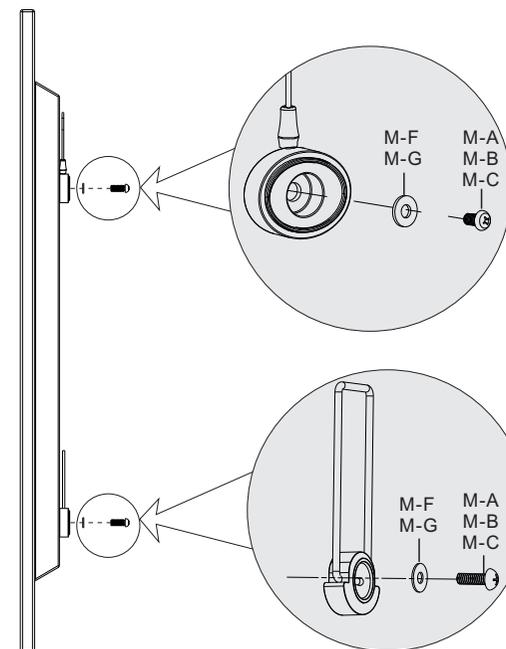 

2-2 For Bump-out or Recessed Back Screens

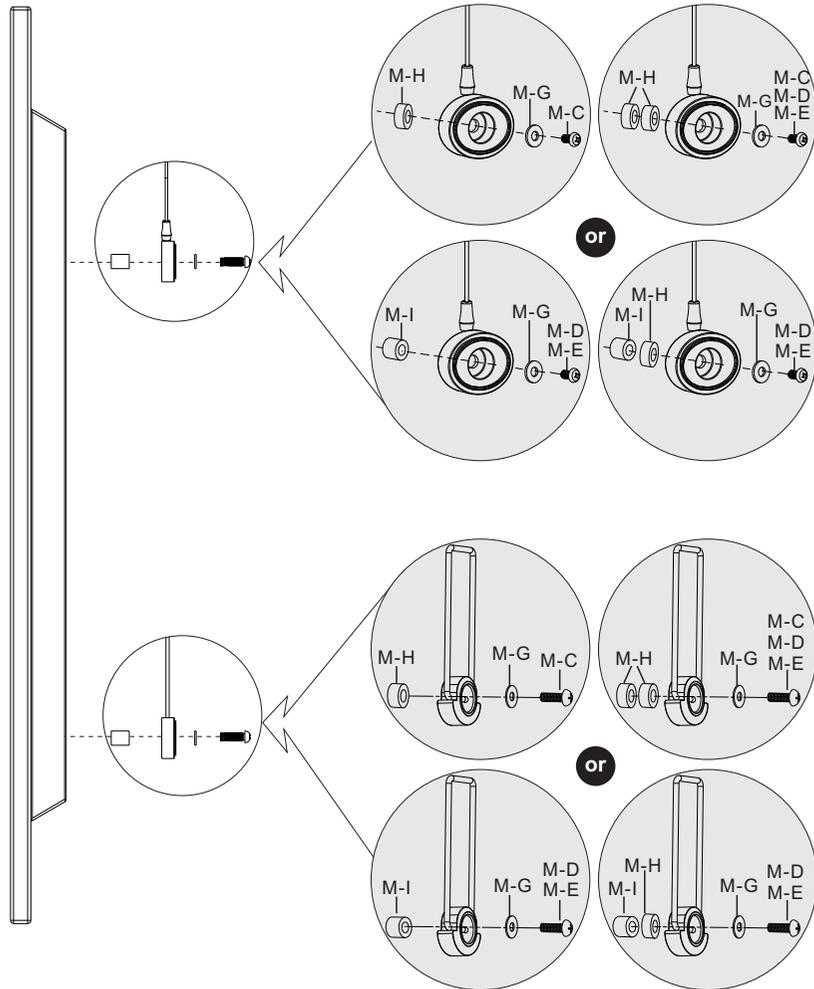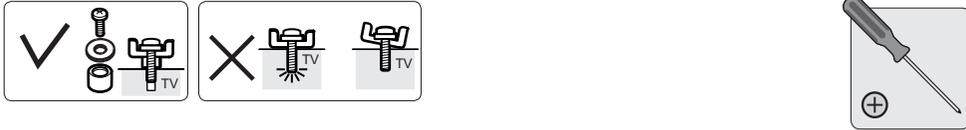


Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.

- Screw the supporting spacers onto the TV.


⚠ Tighten all screws but do not over tighten.

3. Hanging the TV onto the Wall Plate

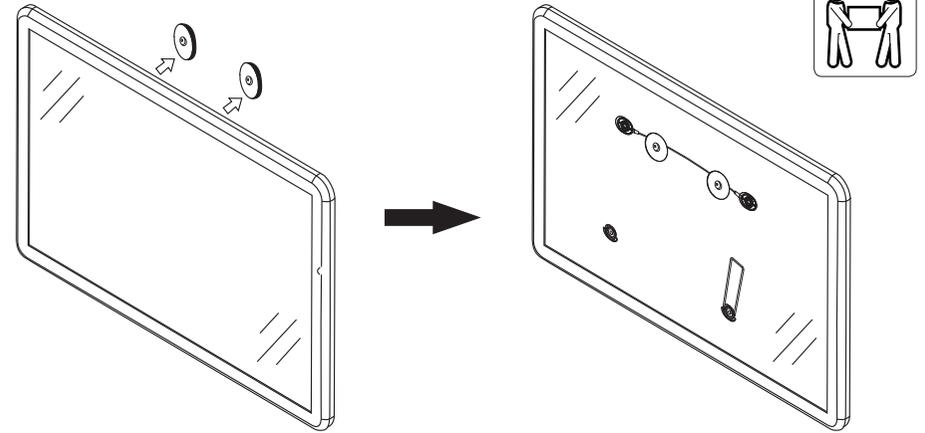

After the wall mount has been safely secured to the wall, Carefully lift your TV and hook wire rope into the wall plate rail. Make sure your TV is securely and correctly attached.

4. Cable Management

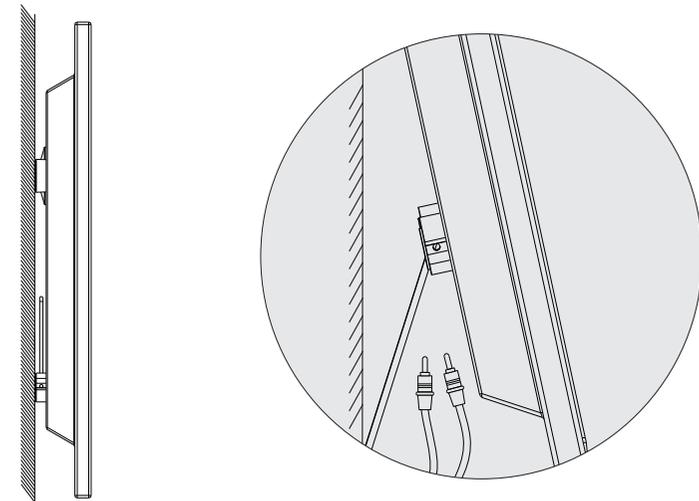

- Fold out the tilt supports to access the cables.
- Fold the tilt supports back once all cables have been installed.

Maintenance

- Check that the bracket is secure and safe to use at regular intervals (at least every three months).
- Please contact your distributor if you have any questions.