



User Manual

Scaler Switcher Multiformat Scaling, 4K (60Hz 4:2:0), HDBaseT Out

Model PT-PSW-41RS

Designed in Germany

Preface

Read this user manual carefully before using this product. Pictures shown in this manual are for reference only. Different model layouts and specifications are subject to the physical product.

This manual is for operation instructions only, not for any maintenance usage.

In the constant effort to improve our product, we reserve the right to make changes in functions or parameters without prior notice or obligation.

Trademarks

Product model and logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without the prior written consent.

FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



REACH | 1907/2006/EU

ROHS | 2011/65/EU

PureLink hereby declares that this product **PureTools PT-PSW-41RS** complies with Directives 1907/2006/EU und 2011/65/EU.

EMC / LVD (Electro Magnetic Compatibility / Low Voltage Directive)

PureLink GmbH hereby declares that this product **PureTools PT-PSW-41RS** complies with Directives 2014/30/EU and 2014/35/EU. The full text of the EU Declaration of Conformity is available at the following Internet address:

http://www.purelink.de/ce/4251364706831_CE.pdf



SAFETY PRECAUTIONS

To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
 - Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
 - Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
 - Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
 - Refer all servicing to qualified service personnel.
 - To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
 - Do not put any heavy items on the extension cable in case of extrusion.
 - Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
 - Install the device in a place with fine ventilation to avoid damage caused by overheat.
 - Keep the module away from liquids.
 - Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
 - Do not twist or pull by force ends of the optical cable. It can cause malfunction.
 - Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
 - Unplug the power cord when left unused for a long period of time.
 - Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.
-

Contents

1. Introduction.....	1
1.1 Introduction to PT-PSW-41RS	1
1.2 Feature	1
1.3 Package List	2
2. Product Appearance	3
2.1 Front Panel.....	3
2.2 Rear Panel	4
3. System Connection.....	6
3.1 Usage Precaution.....	6
3.2 System Diagram.....	7
3.3 Connection Procedure	7
3.4 Application.....	8
4. System Operation.....	9
4.1 Button Control.....	9
4.1.1 Manual Switching	9
4.1.2 Auto Switching	9
4.2 IR Control.....	10
4.2.1 Control the Scaler Switcher	10
4.2.2 Control the Third-Party Device	12
4.3 RS232 Control.....	13
4.3.1 Control the Scaler Switcher	13
4.3.2 RS232 Control Software	13
4.3.3 RS232 Command	15
4.3.4 Control the Third-Party Device	21
5. Specification.....	22
6. Panel Drawing.....	24
7. Troubleshooting & Maintenance.....	25
8. After-Sales Service.....	26

1. Introduction

1.1 Introduction to PT-PSW-41RS

The PT-PSW-41RS with Extension is a compact mini scaler switcher with 4 video inputs (1 HDMI, 1 DP, 1 DVI, and 1 VGA). As the VGA input supports VGA, YPbPr and C-video, so the scaler switcher works with multiple video signals.

This product scales and switches any video signal to HDBaseT output (supports PoH and connects to a Video Extender-HDBaseT Receiver, up to a maximum transmission distance of 100 meters 4K ultra HD. With (1) IR IN and (1) RS232, the IR and RS232 signals can be transmitted between the Scaler Switcher and HDBaseT Receiver.

1.2 Feature

- Compact 4x1 multi-format switcher with 4 video inputs 1 HDMI, 1 DP, 1 DVI, 1 VGA), 1 auxiliary audio input mirrored to the VGA/DVI input and 1 Dual-Mono analog audio output .
- Compliant with HDCP2.2.
- Switches HDMI/DP/DVI/VGA input signals to HDBaseT output.
- Scales to 6 different resolutions, DVI/VGA to HDBaseT output-Output resolution selectable to assure preferred output. Support various output resolution, such as 1024×768, 1280×720, 1280×800, 1360×768, 1600×1200, 1920×1080 (default, can be chosen via commands or IR remote), 1920×1200.
- Support HDBT2.0, transmit 4Kx2K signal up to 100m via single CAT5e/CAT6 cable.
- Controlled via Front-panel button, IR and bi-directional RS232.
- Controlled via Dry Contact.
- Support advanced EDID Management.
- Two input switching modes: auto-switching or manual-switching.
- Intuitive indicator for power connect states, source selection, and switching mode selection.
- DVI video supports digital signal, VGA, YPbPr, C-video.

- VGA video supports C-video, YPbPr and VGA.
- Features a USB port for Firmware upgrades.
- Compact design for easy operation, works in a variety of applications from security monitoring, conference rooms, classrooms, control center and smart homes.
- Features off memory for reliable operation - input and output mapping is automatically stored and recalled when the unit is powered on and off and in the event of a power outage.
- Supports hot plug.

1.3 Package List

- 1 x PT-PSW-41RS
- 2 x Mounting Ears
- 4 x Screws
- 4 x Plastic Cushions
- 1 x IR Receiver (with carrier wave)
- 1 x IR Remote (Cell battery is not included)
- 2 x 3-pin Phoenix Connectors
- 1 x Power Adapter (DC12V 2A)
- 1 x User Manual

Note: Confirm if the product and the accessories are all included, if not, please contact with your dealers.

2. Product Appearance

2.1 Front Panel



① Indicators:

- Power: Lights red when power is on, turns green in standby mode.
- LINK: Lights green when the Scaler Switcher and HDBaseT Receiver are successfully communicating via shielded category 5e or greater cabling
- HDMI: HDMI Activity LED
- DP: DisplayPort Activity LED
- DVI: DVI Activity LED
- VGA: VGA Activity LED
- AUTO: Auto-Switching Mode LED

② FW(USB Port):

- Connects to a USB flash drive or other storage device to update the system firmware. Please contact with our after-sales department for more details.


③ PoH Mode Switcher

- ON: Enable PoH function. The far-end HDBaseT Receiver are powered by the Scaler Switcher 48VDC by PoH technology.
- OFF: Disable PoH function.

④ Source selection button / Switching mode selection button

- Used as a video source selection button, press to select one source, press again to select next source, switching sequentially between HDMI, DP, DVI and VGA.
- Used as a switching mode selection button, press and hold for 3 seconds or more to enter auto-switching mode, the auto LED turn green and keep on. Press and hold for 3 seconds or more again to enter manual-switching mode.

2.2 Rear Panel

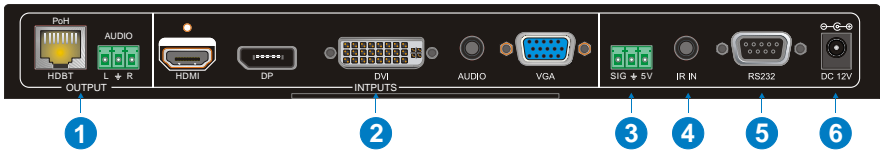

① OUTPUTS:

- HDBT/PoH: HDBaseT output, support PoH.
- AUDIO: Dual-Mono analog audio output port, the audio comes from the input audio corresponding to the selected video source.

② INPUTS

- Video inputs: 1 HDMI, 1 DP, 1 DVI and 1 VGA source input ports. VGA port support YPbPr, C-video, and VGA format. Factory default is VGA format.
- Audio input: 1 3.5mm stereo audio source input port, provide external audio input for DVI/VGA video signal, switched following the corresponding DVI/VGA video input.

③ SIG 5V

- 3-pin phoenix connector, connect with a reset button to be used as a video source selection button.

④ **IR IN**

- Connects with IR receiver (with carrier wave only), to receive IR signal send by the IR remote to control this Scaler Switcher or far-end third-party device connected to the HDBaseT Receiver.

⑤ **RS232**

- Serial control port, DB9 connector, connect with a control device (such as a computer) to control the Scaler Switcher or other devices connected with HDBaseT Receiver.

⑥ **DC 12V**


- Power port, connect with DC12V power adapter.

3. System Connection

3.1 Usage Precaution

- Verify all components included with the product are present before installation
- System should be installed in a clean environment, preferably at ambient temperature or within given working temperature range (see page 22 for limits).
- If the product will be permanently mounted to a surface, attach the included mounting ears with the supplied screws.
- If the products will be sitting on a shelf, attach the included Plastic cushions to the bottom of the unit.
- All of the power switches, plugs, sockets and power cords should be insulated and safe.
- Turn off power and disconnect the audio/video equipment by following the manufacturer's instructions.

3.2 System Diagram

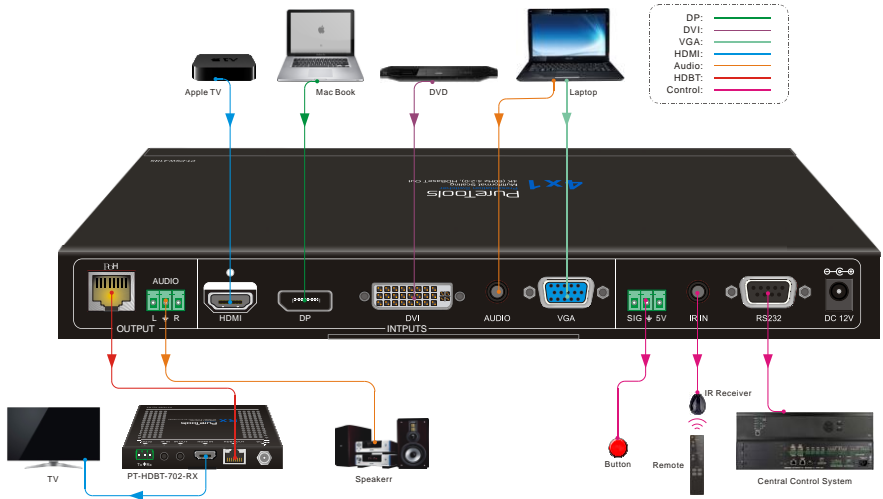

3.3 Connection Procedure

- Step1.** Connect a HDMI source device to the HDMI Input port with HDMI signal cable.
- Step2.** Connect a DisplayPort source device to the DP Input port with DisplayPort signal cable.
- Step3.** Connect a DVI source device to the DVI Input port with DVI signal cable.
- Step4.** Connect a VGA source device to the VGA Input port with VGA signal cable.
- Step5.** Connect the audio source device to the 3.5mm stereo audio source input port with audio cable.
- Step6.** Connect an HDBaseT Receiver to the HDBT output port with twisted pair.
- Step7.** Connect a speaker, headphone, or amplifier to the Dual-Mono analog audio output port.

- Step8.** Connect a reset button to the SIG 5V port as needed, the button can be used as a video source selector.
- Step9.** Connect the included IR Receiver to the IR IN port, the Switcher can be controlled through the IR remote. While connect an IR Emitter to the IR OUT port of HDBaseT port, the third party device connected to HDBaseT Receiver also can be controlled via IR remote.
- Step10.** Connect control device (e.g. PC) to the RS232 port of the Scaler Switcher or HDBaseT Receiver (bi-directional RS232 control, either end is available). The Scaler Switcher can be control by sending RS232 commands via PC.
- Step11.** Connect DC12V power adaptor to the power port (HDBaseT Receiver is able to get power from the Scaler Switcher with PoH function).

Notice: *The Scaler Switcher supports unidirectional PoH, i.e., If the power adapter is connecting with the Switcher, HDBaseT Receiver can be powered through HDBT port; but when the power adapter is connecting with HDBaseT Receiver, the Switcher cannot be powered by the HDBaseT Receiver.*

3.4 Application

The Scaler Switcher has a good application in various occasions, such as computer realm, monitoring, conference room, big screen displaying, television education, command & control center and smart home etc.

4. System Operation

4.1 Button Control

Front panel buttons can be used for source selections, there are 4 sources for choose in total, including HDMI, DP, DVI, VGA. Video signals support auto-switching and manual switching (factory default).

4.1.1 Manual Switching

Press to **SOURCE/AUTO** button select one source, press again to select next source, switching sequentially between HDMI, DP, DVI and VGA.

4.1.2 Auto Switching

Press and hold for **SOURCE/AUTO** button for **3 seconds or more** to enter in auto-switching mode. In this mode, the Scaler Switcher will follow these rules to select input source automatically.

➤ **New input:**

Once detecting a new input signal, the Scaler Switcher would switch to this new signal automatically.

➤ **Rebooting device**

The Scaler Switcher have the ability to save the last configuration before losing power. If the last switching mode is auto-switching, once rebooted, the Scaler Switcher will automatically enter auto-switching mode, and then detect all inputs and memorize their connection status for future rebooting using. If the last displayed signal is still available, the unit will output the signal. If not, the unit will detect all the inputs signals with priority from HDMI to VGA. When detected the first signal, it will transfer to output.

➤ **Signal removing**

Once removing the current display signal, the Scaler Switcher will detect all input signals with priority from HDMI to VGA. When detected the first signal, it will transfer to output.

Notice:

- *In manual-switching mode, if you set the signal format of VGA/DVI input to C-video or YPbPr, the system will not be able to enter Auto-switching mode.*
- *In auto-switching mode, if the signal format of DVI input is C-video/YPbPr, the Scaler Switcher can't detect the DVI input, the command 50686% should be sent via PC to convert C-video/YPbPr into digital signal format, and then the Scaler Switcher will enter*
- *In auto-switching mode, select input source via front panel button is not available, but RS232 command and IR remote are able to switch mode.*


4.2 IR Control

4.2.1 Control the Scaler Switcher

Firstly, connect IR Receiver to IR IN port;

Secondly, send command **50782%** (IR Mode 2, factory default) via RS232 communication software, the Scaler Switcher can be controlled by using IR remote.

Here is the brief introduction for IR remote of this Scaler Switcher.

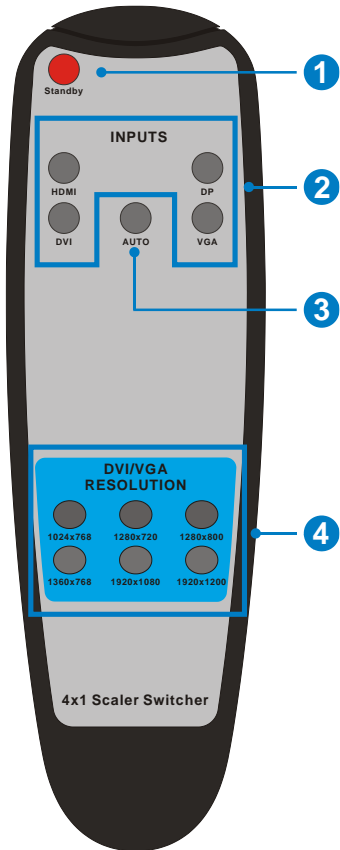

① **Standby button**

Enter/ exit standby mode

② **Input channel selection buttons**

Select video source via pressing corresponding button (audio switched following the corresponding DVI/VGA).

③ **Auto button**

Enter/Exit auto-switching mode.


④ **Resolution selection buttons**

Select output resolution for DVI/VGA input by pressing corresponding button, including 1024×768, 1280×720, 1280×800, 1360×768, 1920×1080 (default), 1920×1200.

4.2.2 Control the Third-Party Device

Firstly, connect IR emitter to the IR OUT port of HDBaseT Receiver;

Secondly, send command **50781%** (IR mode 1) via RS232 communication software, the far-end display device (such as HDTV) can be controlled locally by using its IR remote.

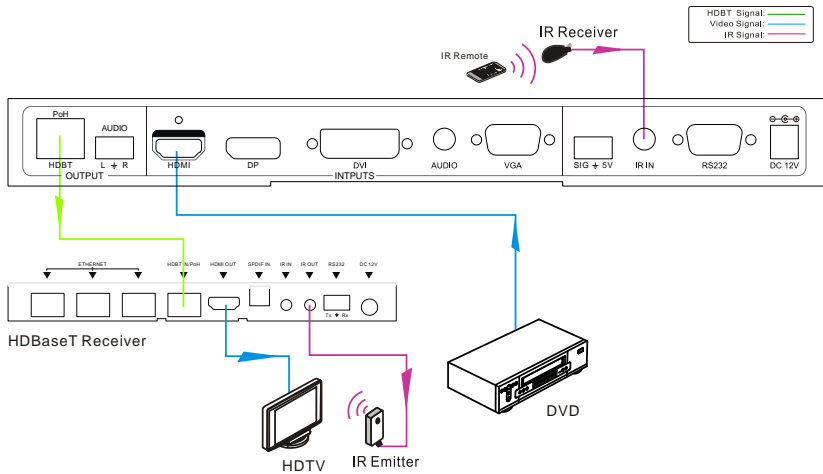


4.3 RS232 Control

The Scaler Switcher and the far-end third-party RS232 device can be controlled by sending RS232 commands via control PC. When to control a third-party RS232 device, the baud rate of this device should be 2400, 4800, 9600, 19200, 38400, 57600 or 115200.

4.3.1 Control the Scaler Switcher

The **Scaler Switcher** can be control via RS232 commands, and the connection solution show as below:

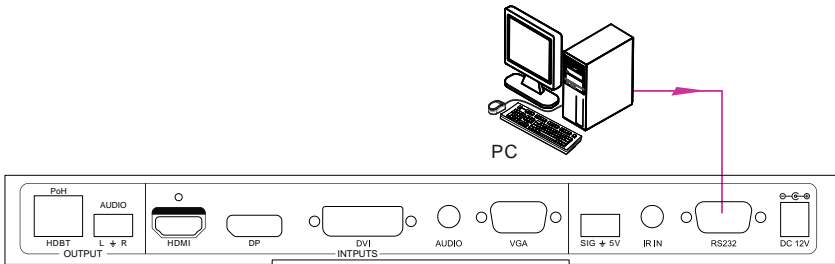

Control Scaler Switcher

4.3.2 RS232 Control Software

- Installation Copy the control software file to the PC.
- Uninstallation Delete all the control software files in corresponding file path.


Basic Settings:

First to connect the Scaler Switcher with all input devices and output devices needed, then to connect it with a computer which is installed with RS232 control software. Double-click the software icon to run this software.

Here we take the software **CommWatch.exe** as example. The icon is showed as below:



The interface of the control software is showed as below:

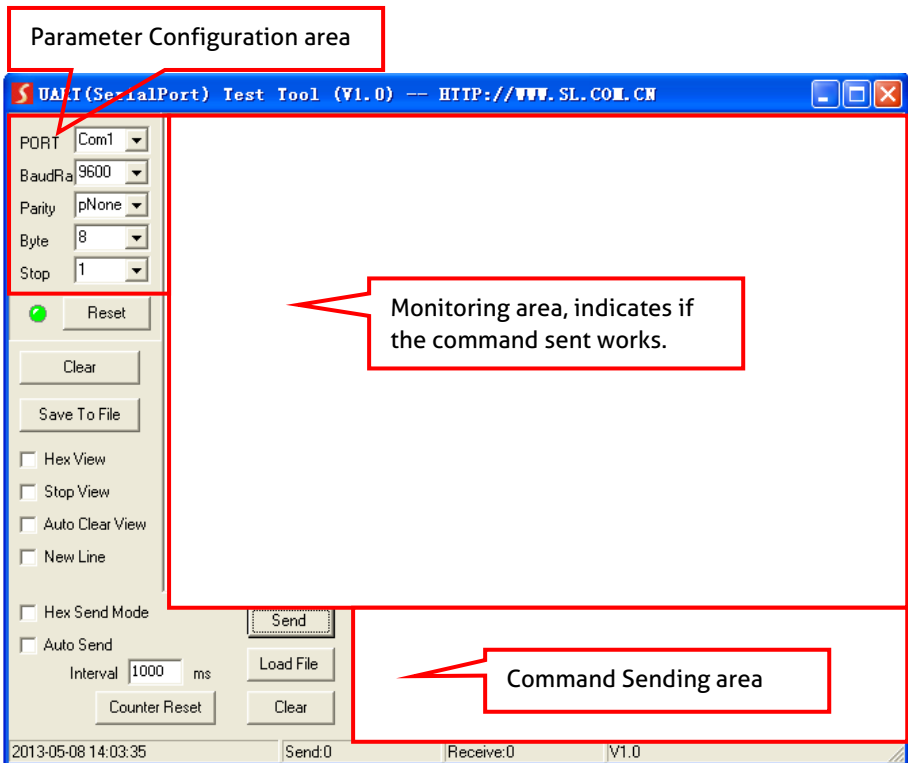

Please set the parameters of COM number, bound rate, data bit, stop bit and the parity bit correctly, and then you are able to send command in Command Sending Area.

4.3.3 RS232 Command

Communication protocol: RS232 Communication Protocol

Baud rate: 9600

Data bit: 8

Stop bit: 1

Parity bit: none

Switch Commands		
Command	Function	Feedback Example
50701%	Switch to HDMI input	Switch to HDMI
50702%	Switch to DP input	Switch to DP
50703%	Switch to DVI input	Switch to DVI
50704%	Switch to VGA input	Switch to VGA
50680%	Convert into VGA signal format for VGA input	Input VGA Set & Switch to VGA 1
50681%	Convert into YPbPr signal format for VGA input	Input VGA Set & Switch to YPbPr 1
50682%	Convert into C-video signal format for VGA input	Input VGA Set & Switch to AV 1
50683%	Convert into VGA signal format for DVI input	Input DVI Set & Switch to VGA 2
50684%	Convert into YPbPr signal format for DVI input	Input DVI Set & Switch to YPbPr 2
50685%	Convert into C-video signal format for DVI input	Input DVI Set & Switch to AV 2
50686%	Convert into digital signal format for DVI input	Input DVI Set & Switch to Digital
50770%	Enable auto-switching	Auto Switching
50771%	Disable auto-switching	Manual Switching

Audio Commands

Command	Function	Feedback Example
50708%	Select the embedded audio as DVI audio input	DVI Audio from Embedded
50709%	Select the external audio as DVI audio input	DVI Audio from Embedded

Resolution Commands

Command	Function	Feedback Example
50619%	Set the output resolution to 1360x768 HD	Resolution: 1360x768
50620%	Set the output resolution to 1920x1200 WUXGA	Resolution: 1920x1200
50621%	Set the output resolution to 1600x1200 UXGA	Resolution: 1600x1200
50626%	Set the output resolution to 1024x768 XGA	Resolution: 1024x768
50627%	Set the output resolution to 1280x720 720P	Resolution: 1280x720
50628%	Change the resolution to 1280x800 WXGA	Resolution: 1280x800
50629%	Set the output resolution to 1920x1080 1080P	Resolution: 1920x1080

IR& RS232 Setup Commands

Command	Function	Feedback Example
50779%	RS232 control mode 1: Control the far-end third-party device by sending RS232 commands via PC,	RS232 Mode 1: Enable RS232 Control Remote
50780%	RS232 control mode 2: Control the Scaler Switcher by sending RS232 commands via PC.	RS232 Mode 2: Disable RS232 Control Remote
50781%	IR control mode 1: Control the far-end third-party device by using its IR remote.	IR Mode 1:IR Control Remote
50782%	IR control mode 2: Control the Scaler Switcher by using IR remote.	IR Mode 2:IR Control Scaler

EDID Management Commands

Command	Function	Feedback Example
50772%	EDID pass-through mode	EDID:bypass mode
50773%	EDID 1080P 2PCM	EDID:1080P&PCM 2ch
50774%	EDID 1080P 5.1	EDID:1080P&5.1ch
50775%	EDID 1080P3D 5.1	EDID:1080P3d&5.1ch
50776%	EDID 1080I 2PCM	EDID:1080i&PCM 2ch
50777%	EDID 4K*2K 2PCM	EDID:4K&PCM 2ch

Image Setup Commands		
Command	Function	Feedback Example
502xx%	Set the brightness to xx.	Brightness: xx (xx=00-99)
503xx%	Set the contrast to xx.	Contrast: xx (xx=00-99)
504xx%	Set the saturation to xx.	Saturation: xx (xx=00-99)
505xx%	Set the sharpness to xx.	Sharpness: xx (xx=00-99)
50606%	Auto-adjust the input parameter for VGA signal	VGA Input Auto
50607%	Adjust the color temperature	Color Temperature: xx (xx= Cool/ Medium/ Warm/ User.)
50608%	Set the aspect ratio	Aspect Ratio: xx (xx= 16:9/ 4:3/ auto)
50614%	Set the picture mode	Picture Mode: xx (xx= dynamic/ standard/ mild/ user)

Image adjustment Commands		
Command	Function	Feedback Example
50678%	Enable screen output adjusting	Enter Output Position Adjust
50679%	Disable screen output adjusting	Exit Output Position Adjust
50670%	Move the image to left	Output Position Adjust X xx
50671%	Move the image to right	Output Position Adjust X xx
50672%	Move the image up	Output Position Adjust Y XX
50673%	Move the image down	Output Position Adjust Y xx
50674%	Stretch left from left side (increase image width)	Output Width Adjust xx

Image adjustment Commands		
Command	Function	Feedback Example
50675%	Pull right from left side (decrease image width)	Output Width Adjust xx
50676%	Stretch upwards from bottom side (decrease image height)	Output Height Adjust xx
50677%	Stretch downwards from bottom side (increase image height)	Output Height Adjust xx
50705%	Change the horizontal polarity to the opposite	Hpolarity:0/1
50706%	Change the vertical polarity to the opposite	Vpolarity:0/1

Inquire Commands		
Command	Function	Feedback Example
50631%	Check the current input source	Input: xx (xx= HDMI/ DP/ DVI/ VGA)
50632%	Check the output resolution	Resolution: xx (xx=1920×1200/ 1920×1080/1360×768/ 1280×800/ 1280×720/ 1024×768)
50633%	Check the image mode	Picture Mode: xx (xx= Dynamic/ Standard/ Mild/ User)
50635%	Check the image aspect ratio	Aspect Ratio: xx (xx= 16:9/ 4:3/ auto)
50636%	Check the brightness	Brightness: xx (xx=00-99)
50637%	Check the contrast	Contrast: xx (xx=00-99)
50638%	Check the saturation	Saturation: xx (xx=00-99)
50639%	Check sharpness	Sharpness: xx (xx=00-99)
50640%	Check the color temperature	Color Temperature: xx (XX= Cool/ Medium/ Warm/ User.)

Inquire Commands		
Command	Function	Feedback Example
50778%	Check the EDID	EDID: xx (xx=1080P&PCM 2ch/ 1080P&5.1ch/ 1080P3d&5.1ch/ 4K&PCM 2ch)
50793%	Check the HDCP status	HDCP Off/ HDCP On/ HDCP Active
50707%	Check the current output resolution and polarity.	1920x1080 Hpolarity:1/0 Vpolarity:0/1
50699%	Check the firmware version	Version Vx.x.x (x=0~9)


System Commands		
50697%	Wake up or let this device go into standby mode.	STANDBY. /PWON.
50698%	Software updating	
50617%	Restore the factory default settings	

Notice:

- When HDCP is set to active, whether output source is with HDCP depends on input source. If the input source is with HDCP, so is the output and vice versa.
- Screen output adjusting avails only when the screen output adjusting is on. Send command 50678% to turn on.

4.3.4 Control the Third-Party Device

Firstly, following the below connection solution to build control system.

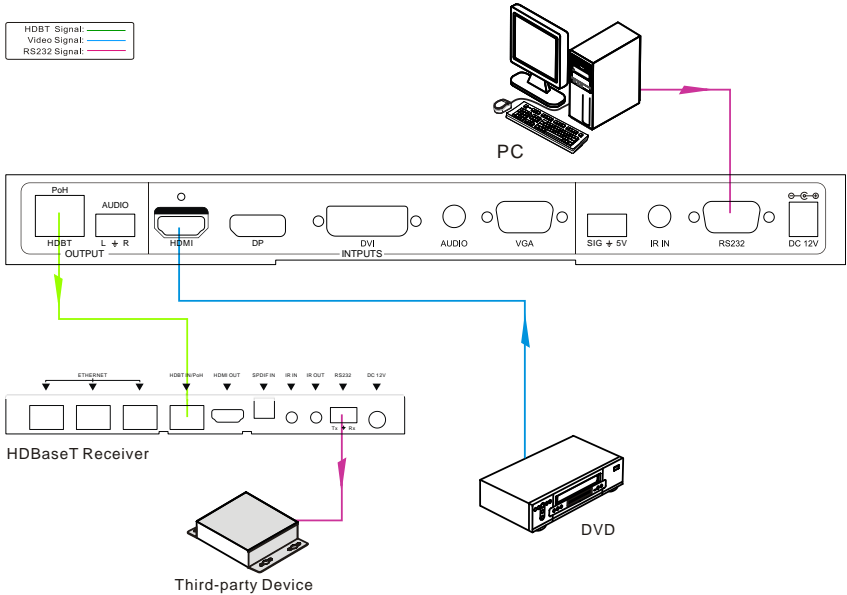

Secondly, send command **50779%** via RS232 communication software.


Lastly, send the right command of the third-party device.

5. Specification

I/O Connections	
HDM Input	One(1) Type A receptacle
DP Input	One(1) Type A DisplayPort
DVI Input	One(1) Type DVI-I female receptacle
VGA Input	One(1) HD-15 female receptacle
External Audio Input	One(1) 3.5mm TRS jack
HDBaseT Output	One(1) RJ45 receptacle
Audio Output	One(1) 3-pin phoenix connector
IR Input	One(1) 3.5mm TRS jack
RS232 Control	One(1) DB9 female receptacle
External button Control (SIG 5V)	One(1) 3-pin phoenix connector
Button Control(Front Panel)	One(1) button in total
PoH Mode Switcher	One(1) 2-position slider switch
Firmware Update	One(1) USB receptacle
DC 12V Power	One(1) Locking Barrel(5.5mm outside diameter, 2.1mm inside diameter)
Video Performance	
DVI/VGA Scaling Resolutions	1920x1200@60Hz, 1920x1080@60Hz, 1600x1200, 1360x768@60Hz, 1280x800@60Hz, 1280x720@60Hz, 1024x768@60Hz.
Maximum Pixel Clock	340MHz
Bandwidth	HDMI:10.2Gbps(3.4Gbps per color) C-Video:150MHz YPbPr: 170MHz VGA: 375MHz
HDMI Compliance	HDMI1.4, HDCP2.2

Video Performance	
Impedance	75Ω
Gain	0 db
Input DDC Signal	5.0 volts p-p (TTL)
Input Video Signal	0.5 to 1.0 volts p-p
Audio Performance	
HDMI Embedded Audio	PCM, Dolby Digital, DTS, DTS-HD
External Audio Signal	1 stereo audio input for DVI/VGA
Audio output signal	1 Dual-mono analog stereo audio
Stereo Channel Separation	>80dB @ 1kHz
Frequency Response	20Hz~20K Hz
Common Mode Rejection Ratio (CMRR)	>90 dB at 20 Hz ~ 20 kHz
General	
Transmission Distance	4K/UHD@60Hz≤100m(Cat6)
Enclosure	Painted aluminum
Dimensions (W x H x D)	280mm x 30mm x 100mm
Weight	514g
Operating Temperature	0° ~ +50° C
Relative Humidity	10% ~ 90%
Maximum Power Consumption	14W
Power Supply	DC 12V 2A
ESD Protection	15KV
Regulatory	CE, FCC

6. Panel Drawing

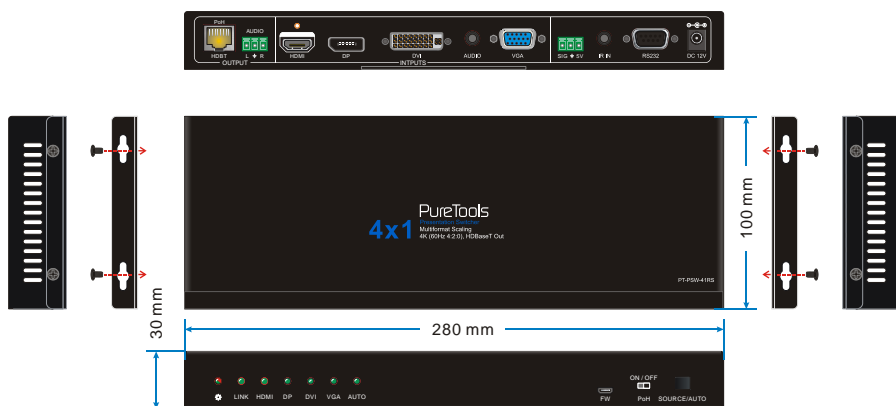

7. Troubleshooting & Maintenance

Problems	Causes	Solutions
Output image with snowflake.	Bad quality of the connecting cable	Try another high quality cable.
	Fail or loose connection	Make sure the connection is good.
No output image when switching.	No signal at the input / output end	Check with oscilloscope or multimeter if there is any signal at the input/ output end.
	Fail or loose connection	Make sure the connection is good.
	The switcher is broken	Send it to authorized dealer for repairing.
POWER indicator doesn't work or no respond to any operation.	Fail connection of power cord.	Make sure the power cord connection is good.
EDID management does not work normally.	The HDMI cable is broken at the output end.	Change for another HDMI cable which is in good working condition.
There is a blank screen on the display when switching.	The display does not support the resolution of the video source.	Switch again.
		Manage the EDID data manually to make the resolution of the video source automatically compliant with the output resolution.

If your problem persists after following the above troubleshooting steps, seek further help from authorized dealer or our technical support.

8. After-Sales Service

If there appear some problems when running the product, please check and deal with the problems referring to this user manual. Any transport costs are borne by the users during the warranty.

- 1) **Product Limited Warranty:** This product will be free from defects in materials and workmanship for **two years** (The purchase invoice shall prevail).
Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

- 2) **What the warranty does not cover (servicing available for a fee):**
 - Warranty expiration.
 - Factory applied serial number has been altered or removed from the product.
 - Damage, deterioration or malfunction caused by:
 - Normal wear and tear.
 - Use of supplies or parts not meeting our specifications.
 - No certificate or invoice as the proof of warranty.
 - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - Damage caused by force majeure.
 - Servicing not authorized by distributor.
 - Any other causes which does not relate to a product defect.
 - Delivery, installation or labor charges for installation or setup of the product.

- 3) **Technical Support:** For any questions or problems, contact your distributor or reseller and tell them the respective product name and version, the detailed failure situation as well as the formation of the cases.

Asking for Assistance

Technical Support:

Phone: +49 5971 800299 - 0

Fax: +49 5971 800299 – 99

Technical Support Hours:

8:30 AM to 5:00 PM Monday thru Thursday

8:30 AM to 4:00 PM Friday

Write to:

PureLink GmbH

Von-Liebig-Straße 10

D - 48432 Rheine

www.purelink.de

info@purelink.de
